EN User instructions

Aquamatic 10 T

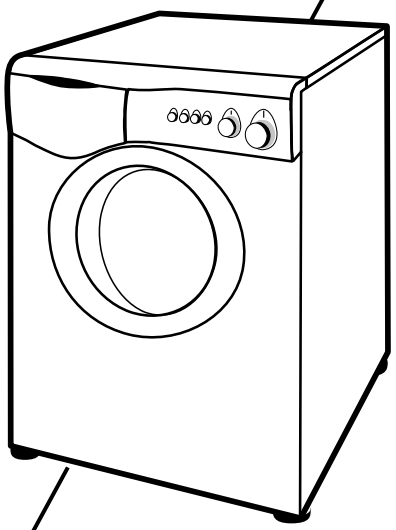

OUR COMPLIMENTS

Thank you for choosing a Candy appliance. Quality washing machines which guarantee high performance and reliability.

Candy is also able to offer a comprehensive range of other household appliances: dishwashers, washer-dryers, cookers, microwave ovens. Traditional ovens and hobs, refrigerators and freezers.

Ask your local retailer for the complete catalogue of Candy products.

Please read this booklet carefully as it provides important guide lines for safe installation, use and maintenance and some useful advice for best results when using your washing machine.

Keep this booklet in a safe place for further consultation.

"When contacting a Candy Service Centre always quote the Model Number and Serial Number of Your Appliance".

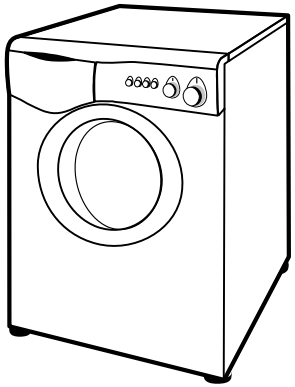

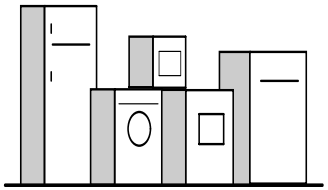

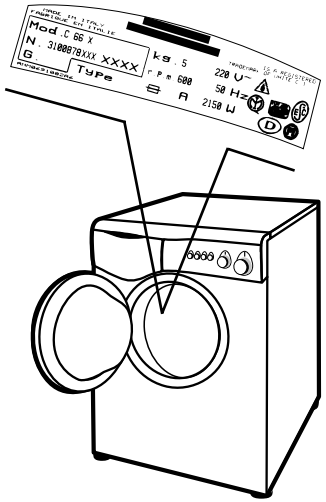

INDEX

	CHAPTER
Introduction	
General points on delivery	**1**
Guarantee	**2**
Safety Measures	**3**
Technical Data	**4**
Setting up and Installation	**5**
Control Description	**6**
Detergent drawer	**7**
Programme Selection Advise	**8**
The Product	**9**
Table of Programmes	**10**
Computing a wash	**11**
Cleaning and routine maintenance	**12**
Faults Search	**13**

CHAPTER1

GENERAL POINT ON DELIVERY

On delivery, check that the following are included with the machine:

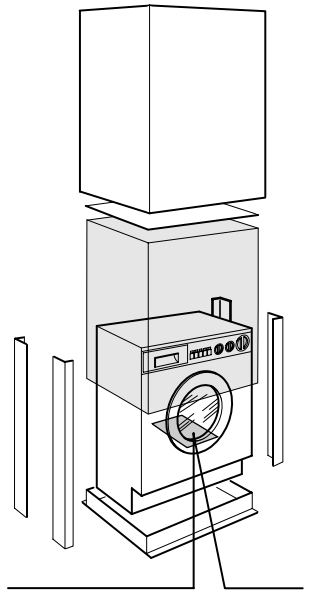

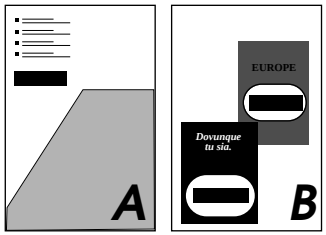

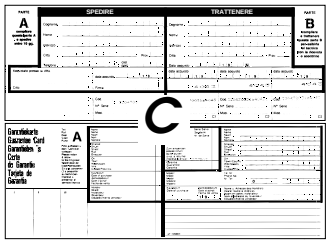

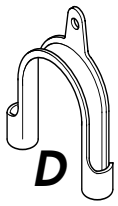

A) AN INSTRUCTION MANUAL

B) CUSTOMER SERVICE ADDRESSES

C) GUARANTEE CERTIFICATES

D) CLAMP FOR OUTLET HOSE

KEEP THEM IN A SAFE PLACE

CHAPTER 2

GUARANTEE

Your new appliance is fully guaranteed by the manufacturer for 12 months against electrical/mechanical breakdown excluding:
***A**. Any faults which occur due to bad installation or misuse of the machine.*
***B**. Any faults which occur due to repair of, or interference with, the machine by any person not authorised by the manufacturer to carry out service.*
***C**. Any faults which occur due to any parts which are fitted to the machine which are not the original manufacturers parts.*
***D**. Any faults arising from non-domestic use or unusual or abnormal use of the machine.*
***E**. Any faults arising from operation at incorrect voltage.*
***F**. Any faults arising from incorrect operation of the machine.*
The guarantee applies to Gt. Britain and Northern Ireland only, and is an addition to your statutory rights.

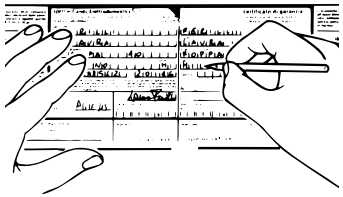

Your appliance is supplied with a registration card which should be completed and returned as indicated.

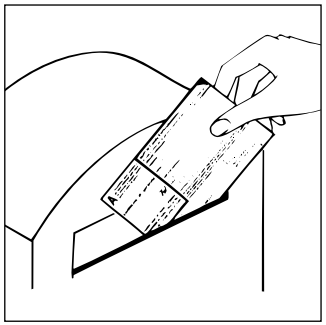

Your purchase receipt should be retained and shown to the Service Engineer in the event of a Service call.

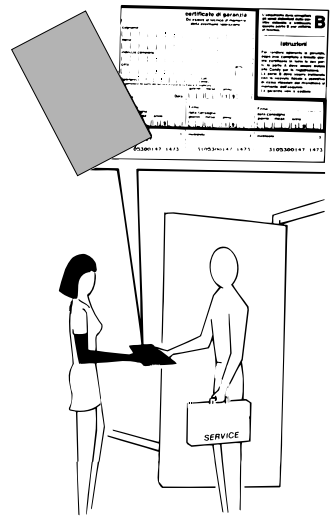

CHAPTER 3

SAFETY MEASURES

IMPORTANT:
FOR ALL CLEANING AND MAINTENANCE WORK ENSURE THE APPLIANCE IS DISCONNECTED FROM THE ELECTRICAL SUPPLY

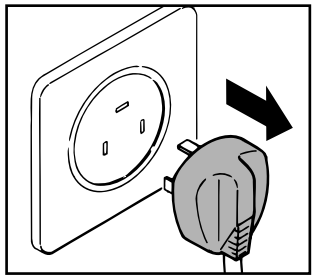

● *Remove the plug*

● *Turn off the water inlet tap.*

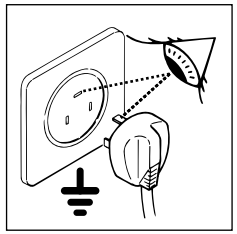

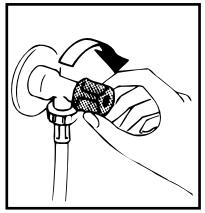

● *All Candy appliances must be earthed. Ensure that the main electricity circuit is earthed. Contact a qualified electrician if this is not the case.*

CE

This appliance complies with Directives 89/336/EEC, 73/23/EEC and following changes.

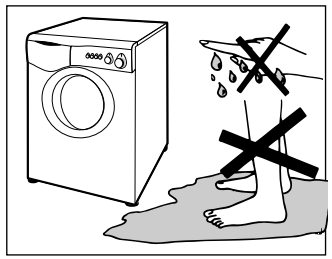

● *Do not touch the appliance with wet or damp hands or feet.*

● *Do not use the appliance when bare-footed.*

WARNING: DURING THE WASHING CYCLE, THE WATER CAN REACH A TEMPERATURE OF 90°C.

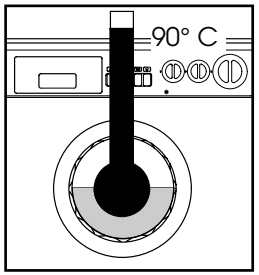

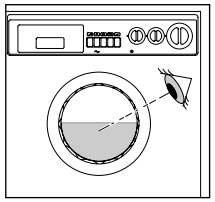

● *Before opening the washing machine door, ensure that there is no water in the drum.*

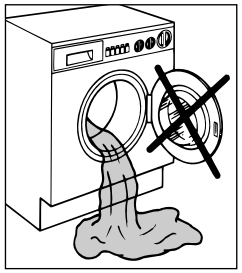

IMPORTANT WARNING:
THIS APPLIANCE MUST BE SECURELY EARTHED

● *Do not use adaptors or multiple plugs.*

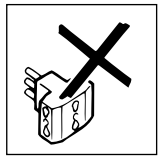

● *Do not allow the appliance to be used by children without due supervision.*

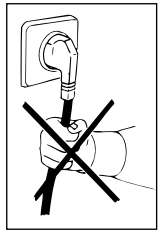

● *Do not pull the mains lead or the appliance itself to remove the plug from the socket.*

● *Do not leave the appliance exposed to the natural elements (rain, sun etc.)*

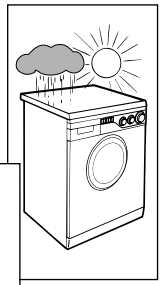

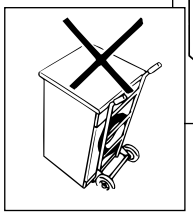

● *Important!*
When the appliance location is on a carpeted floor, attention must be paid to ensure that there is no obstruction to the bottom vents.

● *During transport do not lean the load door against the trolley.*

● *Lift the appliance in pairs as illustrated in the diagram.*

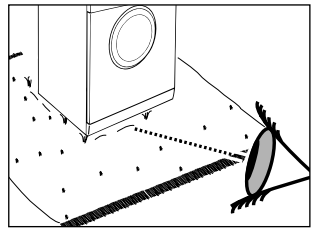

● *In case of failure and/or incorrect operation, turn the washing machine off, disconnect the electrical supply, close the water inlet tap and do not tamper with the appliance. Only contact a Candy Technical Assistance Centre for any eventual repairs and ask for original Candy spare parts.*

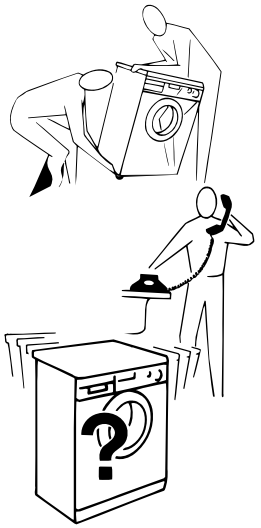

● *Should the supply cord (mains cable) be demaged, this is to be replaced by a specific cable available from the after sales service centre.*

CHAPTER 4

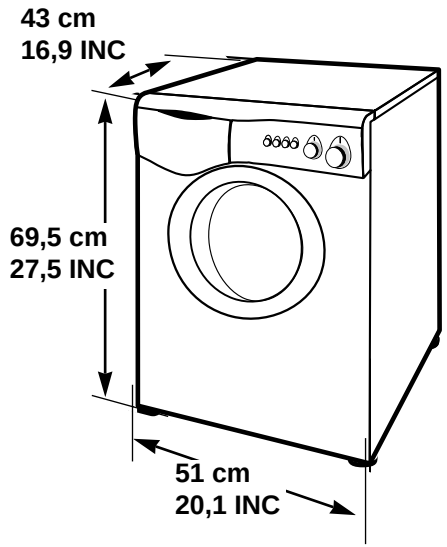

		WASHING
MAXIMUM DRY LOAD	lbs	6,6 (3 kg)
WATER LEVEL	Gall	2,3 (10 l)
WASH MOTOR POWER	W	150
SPIN MOTOR POWER	W	250
ELECTROPUMP POWER	W	30
POWER RESISTANCE	W	1100
MAX ABSORBED POWER 220 V (240 FOR U.K. ONLY)	W	1250
FUSE	A	13
SPIN SPEED	r.p.m.	1000
WATER PRESSURE	Mpa	min. 0,05 max. 0,8

CHAPTER 5

SETTING UP INSTALLATION

Move the machine near to its permanent position without the packaging base.

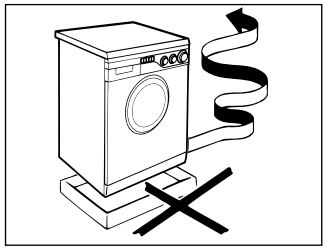

Cut tube - Holding straps

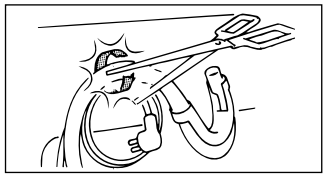

*Unscrew the two top screws **A** and remove the cover, sliding it off horizontally*

Remove the cardboard protection.

*Unscrews the two tie braces **B** on the crosspiece(with a H. 19 spanner) and remove the polystyrene spacers under it.*

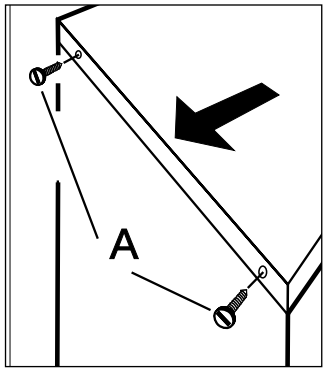

IMPORTANT:
DO NOT REMOVE THE SPACERS ABOVE THE CROSSPIECE.

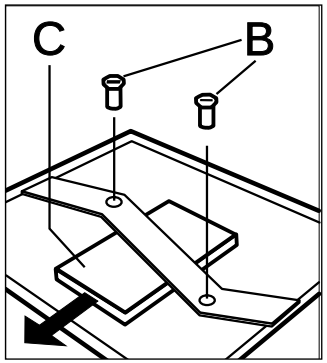

*Replace the cover with the two screws **A** . Please ensure when fitting the table top the locating pins are inserted correctly in their slots, positioned on the side of the cabinet as shown in the relevant diagram.*

WARNING:
DO NOT LEAVE THE PACKAGING WITHIN THE REACH OF CHILDREN AS IT IS A POTENTIAL SOURCE OF DANGER.

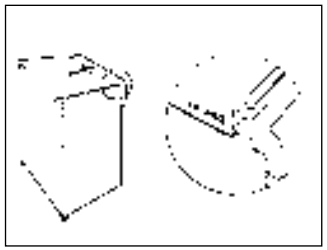

Fix the sheet of corrugated material on the bottom as shown in picture.

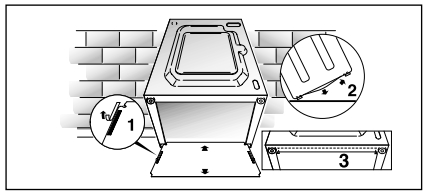

WATER CONNECTION
*Your machine may either be plumbed in or connected to existing taps, using a tap adaptor with a 3/4 B.S.P. threaded end connection. The water supply hoses can be found inside the drum and are terminated in two different ways. One end which has a 90° elbow is to be connected to the appliance water connection **E** while the straight end is to be connected to the domestic supply tap. The hose with the white collar should be connected to the cold tap, and the hose with the red collar to the hot tap. The appliance is not suitable for use with mixer taps.*

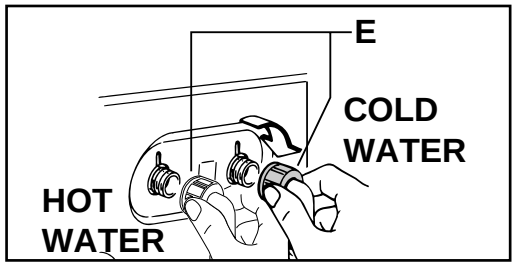

The appliance must be connected to the water mains using new hose-sets. The old hose-sets should not be reused.

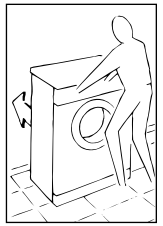

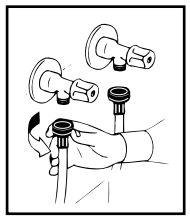

Hook the end of the outlet hose over the rim of the sink or outlet pipe, making sure that it is not kinked. For better positioning of the outlet hose make use of the plastic hose clamp provided.

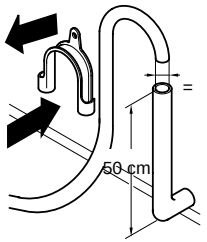

Where possible, use a fixed discharge pipe with a diameter greater than that of the outlet hose of the washing machine to allow air to escape.
The minimum height of the top of the outlet hose should be 50 cm.
Extending the outlet hose, especially if the extension is more than 1 metre, could lead to malfunctioning of the discharge.

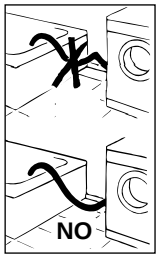

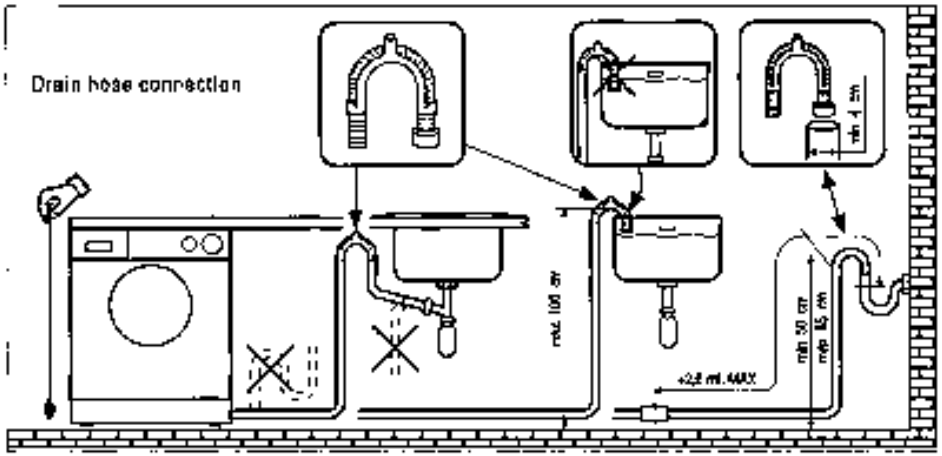

The programme chart is located inside of the detergent drawer as indicate.

Level the machine by means of the front foot.
a) Turn the nut clockwise to release the screw adjuster of the foot.
b) Rotate the foot to raise or lower until it stands firmly on the ground.
c) Lock the foot in position by turning the nut anti-clockwise until it comes up against the bottom of the machine.

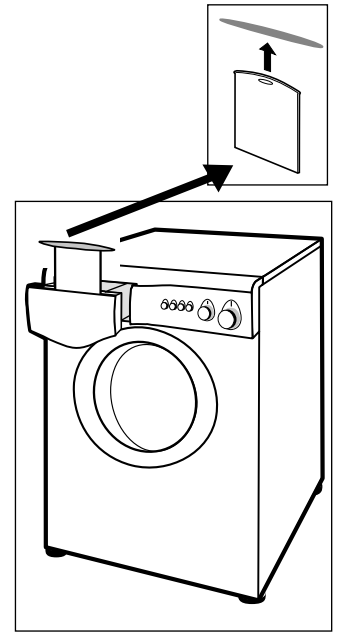

ELECTRICAL CONNECTIONS

If the plug we supply does not fit
CUT IT OFF AND DESTROY IT!
You can't use it on other appliances, and the exposed wires could be dangerous if anyone plugged it in.
Fit a suitable plug, as follows:

Connect	***to the terminal in the plug***
green and yellow wire	*marked withe the letter E, OR marked with the symbol, ... OR coloured green, OR coloured green and yellow.*
blue wire	*marked N OR coloured black.*
brown wire	*marked L OR coloured red.*

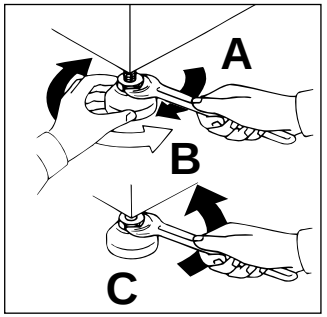

WARNING
This appliance must be earthed

After installation, the appliance must be positioned so that the plug is accessible.

Fuses and plugs
This appliance should be used only on a socket with a minimum rating of 13 Amps.

Our ready-fitted plug is already equipped with a 13 amp fuse which is BS 1362 ASTA approved. Any replacement should be exactly the same.

If the fuse cover is lost, do not use the plug until it is replaced. A correct replacement fuse cover (obtainable from your dealer or Electricity Board) must be the same colour as shown or named on the insert on the base of the plug.

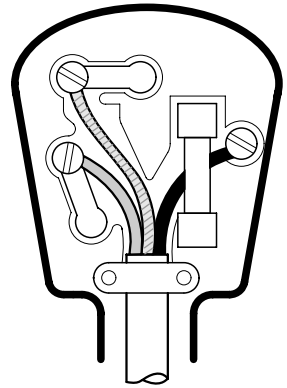

AVSNITT 6

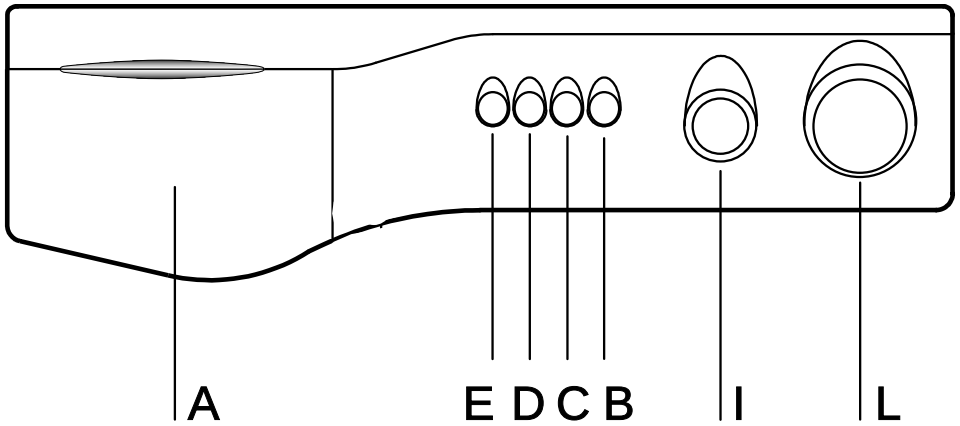

CONTROLS

Detergent drawer	**A**
Door open button	**B**
Off/On button	**C**
No spin button	**D**
Slow spin button	**E**
Wash control temperature knob	**I**
Timer knob for wash programmes	**L**

DESCRIPTION OF CONTROLS

DOOR OPENING BUTTON

B

OPEN DOOR

IMPORTANT:
A SPECIAL SAFETY DEVICE PREVENTS THE DOOR FROM OPENING AT THE END OF THE WASH/SPIN CYCLE.
WE RECOMMEND THAT YOU ALLOW TWO MINUTES TO ELAPSE BEFORE OPENING THE DOOR AT THE END OF THE FINAL SPIN CYCLE.

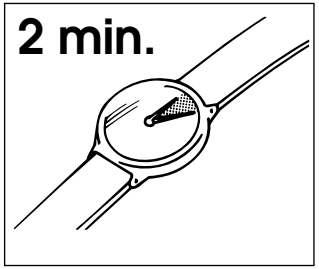

OFF/ON BUTTON

C

ON / OFF

NO SPIN BUTTON

D

NO SPIN

By pressing this button it is possible to eliminate the spin-drying on all programmes. This operation is suitable for programmes at 90°C and at 60°C in case of special treated fabrics (cottonova or permanent press) or for mixed delicate fabrics.

SLOW SPIN BUTTON

The programmes for resistant fabrics operate at high spin speed.
In special circumstances, when the high speed spin is not required, the slow spin key may be pressed thus eliminating the high spin.
In the delicate programmes the drum always spins at 400 r.p.m.

E

SLOW SPIN

WASH TEMPERATURE CONTROL KNOB

I

ROTATES IN BOTH DIRECTIONS

With this device it is possible to reduce, but no increase washing cycle temperature.
The table of programmes indicate the maximum temperature advised for each type of wash.

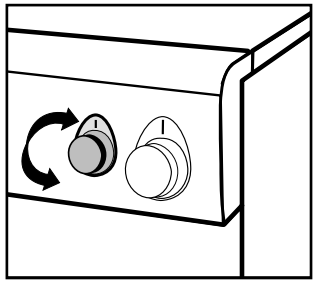

WARNING: THIS TEMPERATURE MUST NEVER BE EXCEEDED

TIMER CONTROL FOR WASH PROGRAMMES

L

IMPORTANT:
ALWAYS TURN THE CONTROL IN A CLOCKWISE DIRECTION, NEVER IN AN ANTI-CLOCKWISE DIRECTION. DO NOT PRESS THE "ON" BUTTON (C) BEFORE SELECTING THE PROGRAMME

The tables describe the wash programmes on the basis of the numbers or symbols chosen.

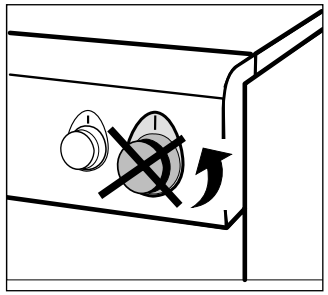

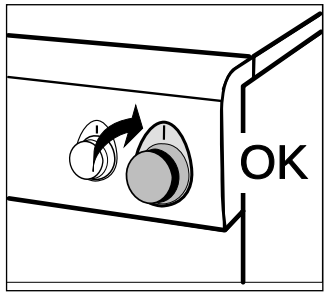

CHAPTER 7

DETERGENT DRAWER

The detergent drawer is divided into 2 compartments:

- Main wash detergent
- Softener

When washing with bleach, use the compartment ⚠ *for softener.*

When pre-washing, put the detergent directly inside the drum.

IMPORTANT:
MOST DETERGENT MANUFACTURERS WILL PROVIDE A CONTAINER FOR DETERGENTS TO BE PLACED DIRECTLY INTO THE DRUM.

IMPORTANT:
ONLY INTRODUCE LIQUID DETERGENTS INTO THE SECOND COMPARTMENT.

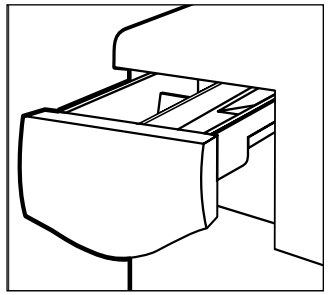

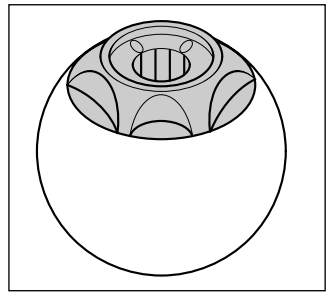

CHAPTER 8

PROGRAMME SELECTION ADVICE

For the various types of fabrics and levels of soiling the washing machine has 2 different programme bands. Wash cycle, temperature and length of cycle (see table of washing cycle programmes).
There is also a pre-wash cycle which can be used with especially dirty laundry.

1 Resistants Fabrics (heavy cottons)
The programmes have been designed for a maximum wash and rinses, with spin intervals, which ensure perfect rinsing. The gradual reduction of the water temperature ensures less fabrics creasing and the final spin gives a more efficient water extraction.

2 Wool and mixed or Delicate Fibres
This is a wash cycle which alternates washing and soaking and is particularly recommended for very delicate fabrics such as machine washable wool. The wash cycle and rinses are carried out with high water levels to ensure the best results.

TO	SIMBOLO ETICHETTA	PROGRAMMA PER	CARICO MAX kg
...ali	95°	**Molto sporco** Lenzuola, tovaglie a colori solidi e bianchi, asciugamani bian...	5
...napa	95°	**PROGRAMMA RAPIDO Molto sp...** Lenzuola, tovaglie a colori soli... bianchi, asciugamani biancheria	
...misti	60°	**Sporco normale** Biancheria colorata, camicie, vesta... maglie, lenzuola	
...sistenti	60°	**PROGRAMMA RAPIDO Sporco normale** Biancheria colorata, camicie, vestaglie, ma... lenzuola	
	60°	Biancheria colorata, mediamente sporca	3.5
...sti	40°	Biancheria di colore stingente, blue jeans	5
		Macchie organiche	-
		Risciacqui energici	5

CHAPTER 9

THE PRODUCT

IMPORTANT:
When washing heavy rugs, bed spreads and other heavy articles, it is advisable not to spin them as damage may occur.

To be machine-washed, woollen garments must bear the machine washable label.

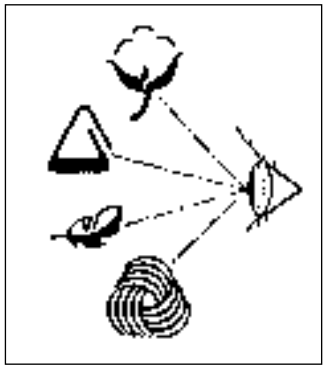

IMPORTANT:
When sorting articles ensure that:
- *there are no metal objects in the washing (e.g. brooches, safety pins, pins, coins etc.).*
- *cushion covers are buttoned, zips and hooks are closed, loose belts and long tapes on dressing gowns are knotted.*
- *runners from curtains are removed.*
- *attention is paid to garment labels.*
- *when sorting, any tough stains should be removed prior to washing using only those stain removers recommended on label.*

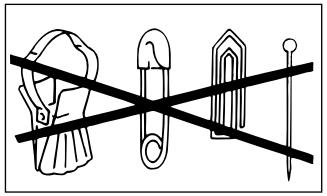

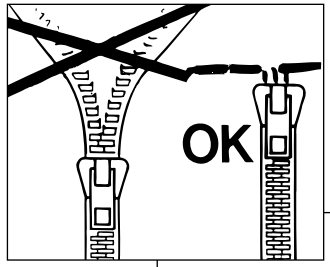

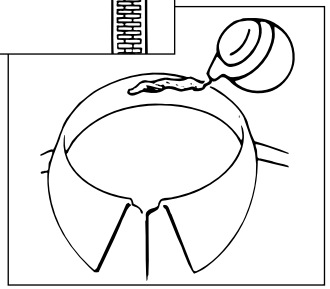

UK

CHAPTER 10

TABLE OF PROGRAMMES

FABRIC	SYMBOL ON LABEL	PROGRAM FOR	WEIGHT MAX kg	SELECT. PROG.	SELECT. TEMP. °C	CHARGE DETERGENT I	CHARGE DETERGENT ❀
Resistants fabrics Cotton, linen	95°	**Heavily soiled** Colour fast table cloths, towels, underwear [2]	3	**1**	40°/90°	●	●
Cotton, mixed resistant	60°	**Normally soiled** Coloured, shirts dressing gowns, sheets	3	**2**	30°/60°	●	●
Cotton, mixed	40°	**Cottons colour fast** Non fast coloureds, blue jeans	2	**3**	30°/40°	●	●
Cotton		Energetic rinsing Conditioner, fragrance, softener	3	**4**	-		●
Cotton, linen		Energetic spin	3	**5**	-		
Mixed and delicate fabrics Mixed, resistants	60°	**Heavily soiled** Shirts, sheets, underwear [2]	1,5	**6**	40°/60°	●	●
Cotton, mixed fabrics, synthetics	50°	**Universal** All types of lightly stained laundry	1,5	**7**	30°/50°	●	●
Synthetics (nylon, perlon), mixed cotton	40°	**RAPID PROGRAMME** Shirts, blouses, skirts with resistants colours, curtains	1,5	**8**	40°	●	●
Woollens		"MACHINE WASHABLE" woollens	1	**9**	40°	●	●
Mixed, delicate synthetics, wool		Delicate spin	1,5	**10**	-		
		Pre-wash [1]	3	**A**	40°		
		Pre-wash bleaching	3	△	-		△
No spin fabrics		Drain only	-	**Z**	-		

Please, read these notes

In case of very dirty articles, a 2 kg maximum load is recommended.

1) When pre-washing, put the detergent directly into the drum.

2) Programmes according to IEC 456.

GET THE BEST RESULTS FROM YOUR NEW CANDY MACHINE

To ensure you get the best results from your new Candy machine it is important to use the right detergent in your everyday wash. There are many detergents on today's supermarket shelves and making a choice from the wide range available can often be confusing.

At Candy we regularly test many different types of detergent to assess which give the best wash results in our machines. We found only one brand always lives up to our exacting standards and provides outstanding cleaning across a broad range of stains, as well as providing high levels of fabric care. That's why Candy gave Ariel their official seal of approval.

CHAPTER 11

WASHING

Assuming that the washing consists of HEAVILY SOILED COTTON (tough stains should be removed with suitable stain removal). When only a limited number of articles have stains which require treatment with liquid bleaching agents, preliminary removal of stains can be carried out in the washing machine. Pour the bleach into the special compartment and set the knob (L) on the special programme "PRE-WASH BLEACHING". When this phase has terminated add the rest of the washing and proceed with a normal wash on the most suitable programme.
It is advisable not to wash a load made up entirely of articles in towelling fabric which absorb a lot of water and become too heavy.

The maximum load for heavy fabrics is 3 kg, while, in the case of delicate fabrics, it is advisable not to exceed 2 kg (1 kg in the case of machine washable woollens so as to avoid the formation of creases which may be difficult to iron). A net bag should be used for particularly delicate fabrics.

EXAMPLE:
Programme guide is set out in the washing programme table:

- *Ensure that labels carry the indication 60°C*
- *Open the load door by pressing button (B).*
- *Load the drum with a maximum of 3 kg. of dry washing.*

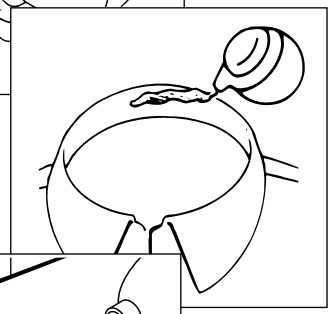

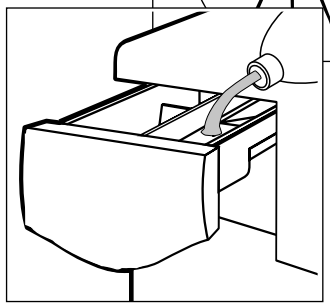

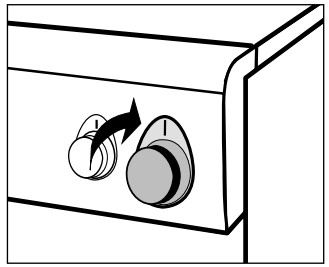

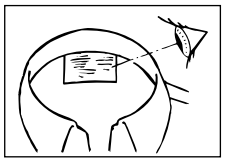

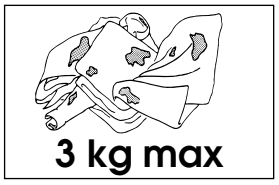

- *Close the door.*

IMPORTANT:
WHEN SETTING THE PROGRAMME DIAL ENSURE THAT THE ON/OFF BUTTON IS NOT SWITCHED ON.

Select programme 1:
Choose the programme by rotating the control (L) in a CLOCKWISE DIRECTION and align the number of the programme with the symbol.

- *Move the temperature knob (I) to 60°.*
- *Open the detergent drawer (A).*
- *Put 60 g, approx. 1 measure, of detergent (for 3 kg) in the wash compartment.*
- *Put 50 cc of the desired additive (for 3 kg) in the second compartment ❀ .*
- *Close the detergent drawer (A).*
- *Ensure that the water inlet taps are turned on.*
- *And that the discharge tube is in place.*
- *Press the "ON" button (C).*
- *The washing machine will carry out the set programme.*
- *At the end of the programme, press the On/Off button (C).*
- *Open the door and remove the washed articles.*

FOR ALL TYPES OF WASH CONSULT THE PROGRAMME TABLE AND FOLLOW THE STEPS IN THE ORDER INDICATED.

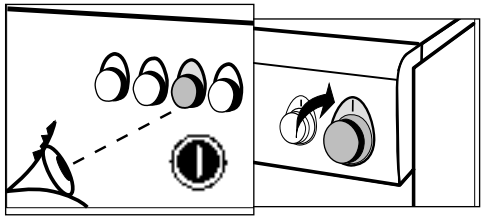

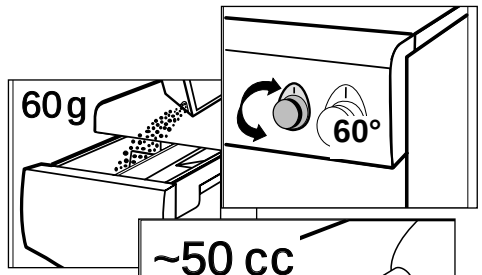

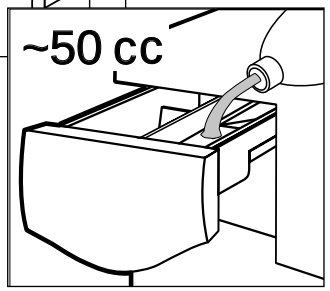

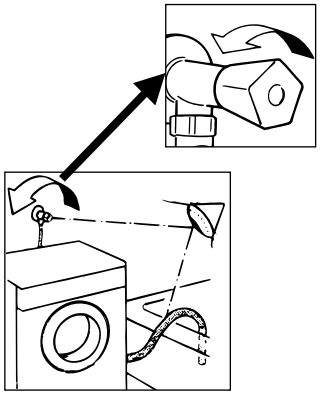

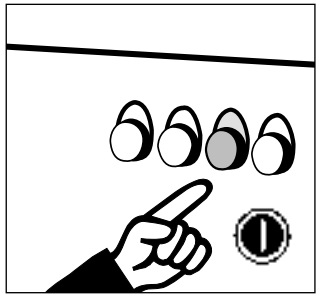

CHAPTER 12

CLEANING AND ROUTINE MAINTENANCE

Do not use abrasives, spirits and/or diluents on the exterior of the washing machine. It is sufficient to use a damp cloth.

The washing machine requires very little customer maintenance:

- *Cleaning detergent drawer compartments.*
- *Moving house or long periods when the machine is left standing.*

CLEANING THE DRAWER COMPARTMENTS

Although not strictly necessary, it is advisable to clean the detergent, and additive compartments occasionally.

Clean with water.

MOVING HOUSE OR DURING LONG PERIODS WHEN THE MACHINE IS LEFT STANDING

After moving house or when the machine is left standing for long periods in an unheated room, the drain hose should be emptied of all of the remaining water.

The appliance must be switched off and unplugged. A bowl is needed. Detach the drainage hose and lower it over the bowl until all the water is removed.

Repeat the same operation with the water inlet hose.

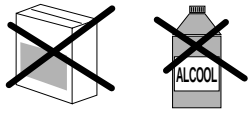

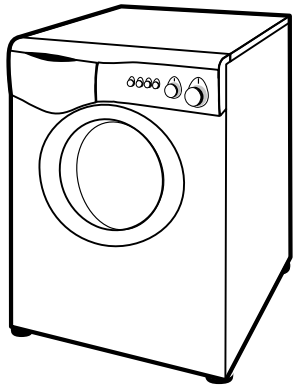

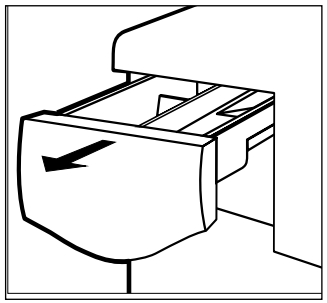

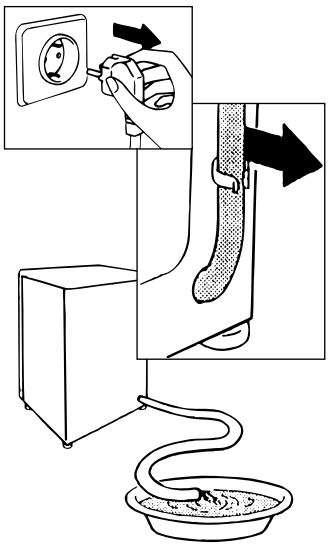

CHAPTER 13

FAULT	CAUSE	REMEDY
1. Does not function on any programme	Mains plug not plugged in	Insert plug
	Mains switch not on	Turn on mains switch
	No power	Check
	Electric circuit fuses failure	Check
	Load door open	Close load door
2. Does not load water	See cause 1	Check
	Inlet tap turned off	Turn on water inlet tap
	Timer not set correctly	Set timer on correct position
3. Does not discharge water	Discharge tube bent	Straighten discharge tube
4. Water on floor around washing machine	Leak from the washer between the tap and inlet tube	Replace washer and tighten the tube on the tap
5. Does not spin	The washing machine has not discharged water	Wait a few minutes until the machine discharges water
	"No spin" setting (some models only)	Turn the programme dial onto spin setting
6. Strong vibrations during spin	Washing machine not perfectly level	Adjust special feet
	Tie braces not removed	Remove tie braces
	Washing load not evenly distributed	Distribute the washing evenly

If the fault should persist, contact a Candy Technical Assistance Centre. For prompt servicing, give the model of the washing machine, to be found on the label placed on the cabinet inside of the porthole or on the guarantee certificate.

Important

1 The use of environment friendly detersives without phosphates may produce the following effects:

- **The discharge rinse water may result cloudier due to the presence of zeolites in suspension. This does not compromise the efficiency of the rinses.**
- **The presence of white powder (zeolites) on the washing at the end of the washing cycle. This does not remain incorporated in the fabric and does not alter the colour.**
- **The presence of foam in the last rinse water which is not necessarily a sign of inadequate rinsing.**
- **The non-ionic surface-active agents present in the composition of washing machine detersives are often difficult to remove from the washing itself and, even in small quantities, may produce visible signs of the formation of foam.**
- **Carrying out further rinses, in cases such as this, is not useful.**

2 If your washing machine fails to function, carry out the above-mentioned checks before calling the Candy Technical Assistance Service.

02.05 - 90489178.A - Printed in Italy - Imprimé en Italie GB